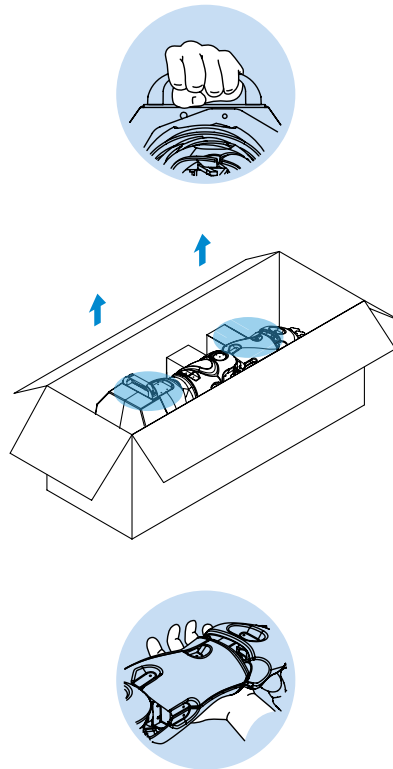# Promobot Rooky

Getting started

1

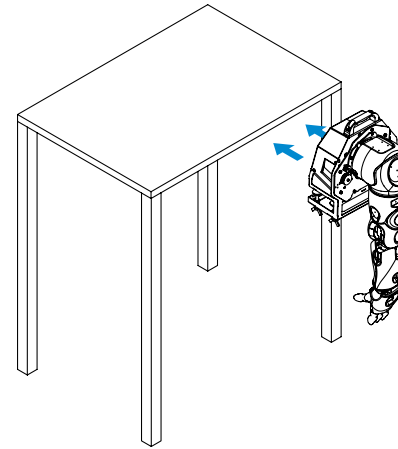Remove the upper part of the polyethylene foam logement.
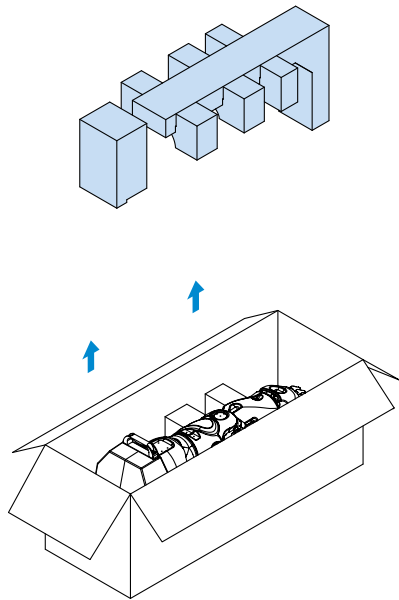
2

Carefully take the robotic arm out of the polyethylene foam logement holding by the highlighted positions.
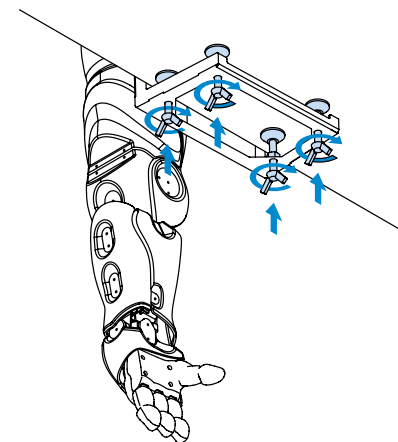
3

Mount the bracket on the tabletop.

4

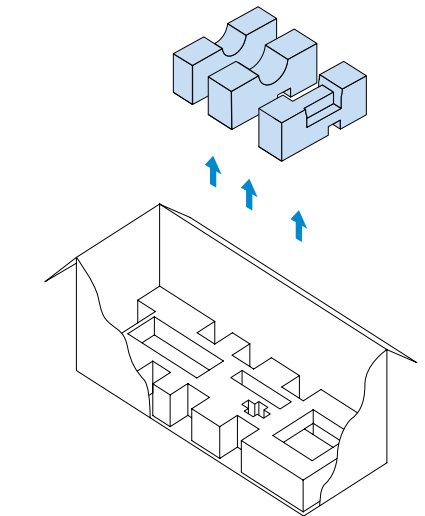Fasten the bracket to the tabletop.

5

Remove a plastic bag from the robotic arm.

6

Remove the stand-logement from the packaging.

7

Take out the rest of the equipment from the bottom of the package: emergency stop button, interface conversion block, power supply and cables.

⚠ **Warning! Before unpackaging the robotic arm, pay attention to its weight (~10 kg)**

Use the QR code to read
the User Manual